




How to connect controller from internet by ELE software setting (Case study "PC-T100+6750V")



Pongee Industries Co., Ltd.

Copyright ©Pongee Industries Co., Ltd.


How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

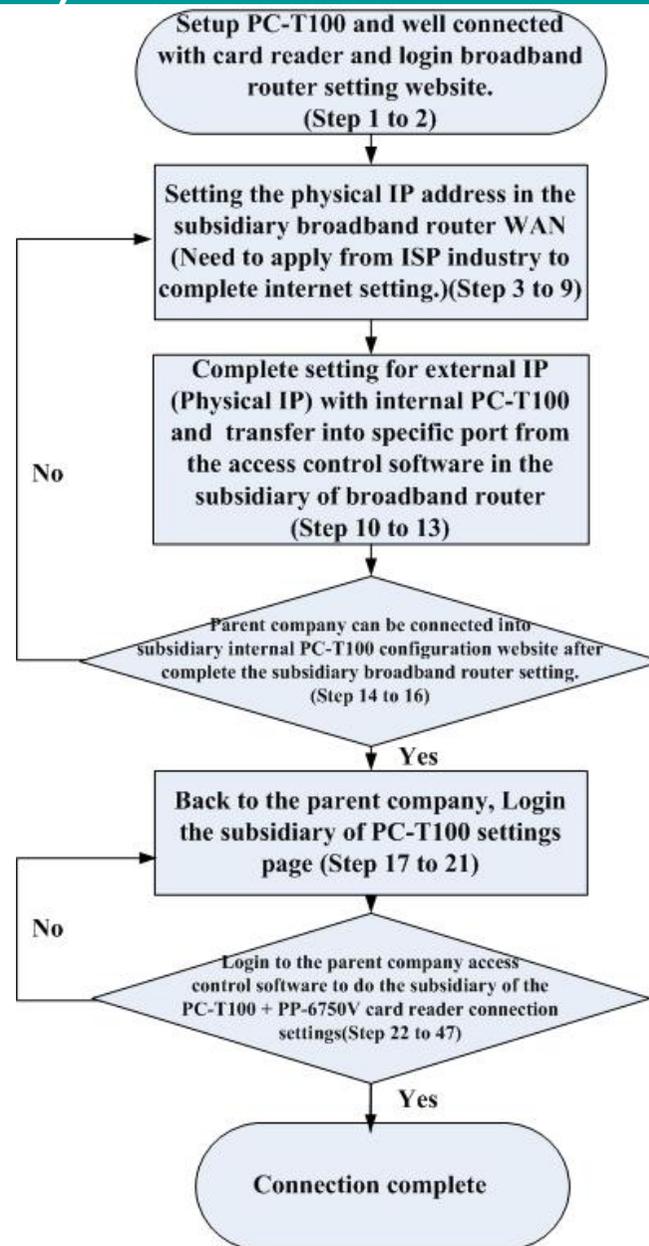

How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

Case study: <Example> Firstly, make sure the parent company had installed access control software to control card readers. Now, because of the demand to extend overseas branches , need to use existing software to control overseas subsidiaries card readers. The following case shows the connection mode for reference

Instruction: To installed PC-T100 and card reader in subsidiary and login broadband router setting website (case example- BUFFALO BBR-4HG)

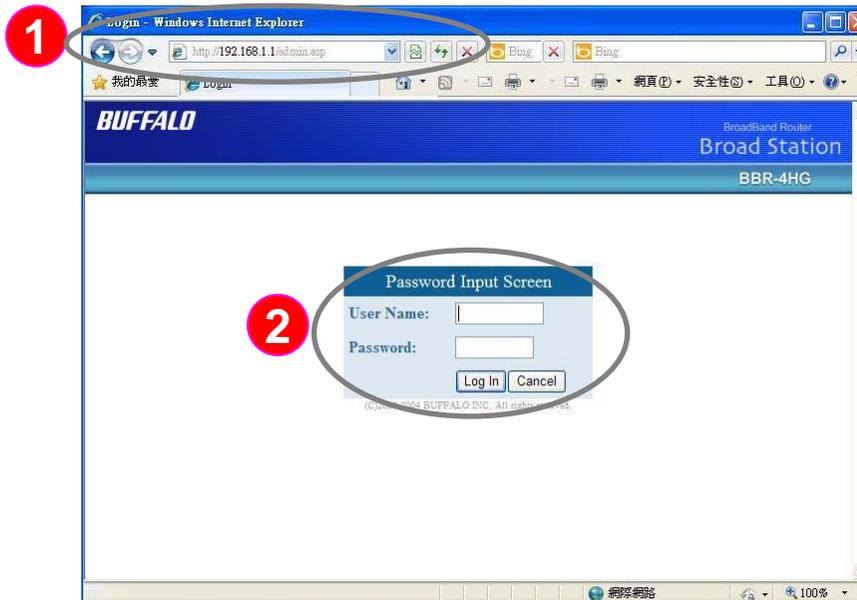

- 1** :Open Internet Explorer, enter the broadband router IP address in the URL (in this case http://192.168.1.1), and, press the "Enter" key
- 2** :Login username and password, get into settings webpage

*Note: each broadband brand router setting is different, this case is just an example for reference only

How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

Instruction : Setting the physical IP address In the subsidiary broadband router WAN (Need to apply from ISP industry), to complete internet setting

BroadBand LocalRouter
Broad Station
BBR-4HG

WAN Port

Wired WAN Communication Method SPEED Automatic
MDI Automatic

WAN side MAC Address. Use the default MAC Address(00:16:01:1E:49:...) Manual Setup

WAN side IP Address Subnet mask

Automatically acquire an IP address from the DHCP Server Use PPPoE Client function Use IP Unnumbered Manual Setup

IP Address 61.255.255.30
Subnet mask 255.255.255.255

Caution :
• By changing the WAN side MAC address, it may become impossible to communicate with other devices on the network. This function is performed at your own risk.

PPPoE Settings (Valid only when using PPPoE Client function/IP Unnumbered)

- 3 :Click "WAN Settings ",it comes out a pull-down menu, please select "WAN Port"
 - 4 :At "WAN side IP Address ", please select "Manual Setup" and input public " IP address " and " Subnet mask " (Need to applied from ISP industry).
 - 5 :After confirmed, press "Set" to complete setting
 - 6 :Click "WAN Settings ",it comes out a pull-down menu, select "WAN Side network"(shown at lower left)
 - 7 :At " Default Gateway", please input gateway applied from ISP industry.
 - 8 :At " DNS (Name) Server Address" , please input applied from ISP industry.
 - 9 :At " WEB Set Port No", please stagger the original "80" port, in this case, we changed into "8080" port
- * Note: "80" port to be defined as the standard port in the Internet, for this case we will allocate PC-T100 to use "80" port

BroadBand LocalRouter
Broad Station
BBR-4HG

WAN Side Network

Host Name

Default Gateway

DNS(Name) Server Address

WEB Set Port No.

Ping from WAN side No Reply Reply

Set

How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

Instruction: Complete setting for external IP (physical IP) with internal PC-T100 and transfer into specific port from the access control software in the Subsidiary of broadband router

BroadBand LocalRouter
Broad Station
BBR-4HG

Address translation setup

Register/Save Return to previous state

* push the register/save button in order to add or edit an item. If before registering/ saving is finished, the page is moved on, the data is lost and returned to the previously saved state.

Address translation table

Group	WAN side IP Address	Protocol	LAN side IP Address	LAN side Port
FTP	BroadStation WAN IP Address	FTP(TCP Port:20,21)	192.168.1.248	FTP(TCP Port:20,21)
pct100	BroadStation(WAN side)	TCP 4001-4002	192.168.1.150	4001-4002
pct100web	BroadStation WAN IP Address	HTTP(TCP Port:80)	192.168.1.150	TCP Port:80

Input an address translation rule

Delete all items

10 : Click "Network Settings" ,it comes out a drop-down menu, please select "Address Translation " (shown at left)

11 : Please press "Input an address translation rule " button, prepare to add on setting

12 :1. "Group " name defined "pct100 "
2. "WAN side IP Address" sources from the broadband router WAN settings of BroadStation (WAN side) (Checked previous steps 2 to 4)

3. "Protocol" select "TCP ""4001-4002 "

4. "LAN side IP Address" sources from the broadband router inner PC-T100 IP (in this case, the default IP address is 192.168.1.150)

5. "LAN side Port" select "TCP""4001-4002 "

13 :Press " Register/Save " to complete setting.

* Note: "4001-4002" is special port for Pegasus access software ,can not be modified.

How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

Instruction: Parent company can be connected into subsidiary internal PC-T100 configuration website after complete the subsidiary broadband router setting

14 :Press " Input an address translation rule " button, to add on the setting

15 :1. "Group " we defined "pct100web "
2. "WAN side IP Address " from the broad band router WAN settings of BroadStation (WAN side) (Previous steps 2 to 4)
3. "Protocol " select "TCP " "80 "
4. " LAN side IP Address" from the broad band router inner PC-T100 IP (in this case, the default IP address is 192.168.1.150)
5. "LAN side Port" select "TCP" "80 "

16 : Press "Register / Save" to complete setting.
* Note: "80" port to be defined as the standard port in the Internet Protocol , in this case is for PC-T100 usage, the parent company can be access subsidiary public IP connect into the subsidiary internal PC-T100 configuration website

BroadBand LocalRouter
Broad Station
BBR-4HG

16 Register/Save Return to previous state

Address translation table

Group	WAN side IP Address	Protocol		LAN side IP Address	LAN side Port
FTP	BroadStation WAN IP Address	FTP(TCP Port:20,21)	<-->	192.168.1.248	FTP(TCP Port:20,21)
pct100	BroadStation WAN IP Address	TCP Port:4001-4002	<-->	192.168.1.150	TCP Port:4001-4002
pct100web	BroadStation(WAN side)	TCP 80	<-->	192.168.1.150	80


15

14 Input an address translation rule

Delete all items

How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

Instruction: Back to the parent company, and login the subsidiary of PC-T100 settings page

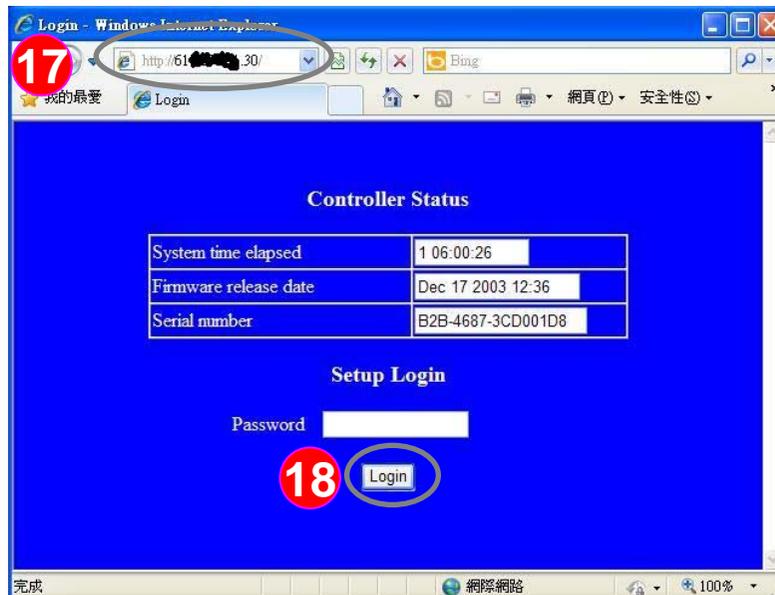

17: Open Internet Explorer, enter the subsidiary public IP address in the URL (in this case http://61.xx30), finally, press the "Enter" key

18: At this step you can enter the PC-T100 settings page, enter the password and press the "Login" button to enter.

* Note: Default PC-T100 no need to enter the password

How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

Instruction: Back to the parent company, and login the subsidiary of PC-T100 settings page

19

Controller Setup	
IP address	192.168.1.150
Subnet mask	255.255.255.0
Gateway address	192.168.1.1
Network link speed	Auto
DHCP client	Disable
Socket port of HTTP setup	80
Destination IP address / socket port (TCP client and UDP)	0.0.0.0 0
Packet mode of serial input	Disable
Device ID	1
Report device ID when connected	Disable
Setup password	
Access password	
Serial Port 1	
Socket port	4002 TCP Server
Interface	RS 232
Baud rate, parity, data and stop bits	4800 None 8 1
Serial Port 2	
Socket port	4001 TCP Server
Interface	RS 485 (Half Duplex)
Baud rate, parity, data and stop bits	9600 None 8 1
Digital I/O Port	
Socket port	102 TCP Server
Configuration	
IO1	Input
IO2	Input
IO3	Input
IO4	Input
IO5	Input
IO6	Input
IO7	Input
IO8	Input

20

21 Update


19 :At subsidiary PC-T100's IP address, subnet mask, and default gateway

20 :1."Serial Port 1 " is in charge of RS-232 interface; "Serial Port 2" is in charge of the RS-485 interface, please follow the card reader communications and wiring connection to the "Socket port" for "4001 TCP Server" (Another requested "4002" is not used)
2."Baud rate" and other related settings based on the card reader specifications

21 :After confirmation,press " Update" to save the setting

* Note: <This case based on> PP-6750V (Baud rate 9600bps) by RS-485 interface to communicate with PC-T100


How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

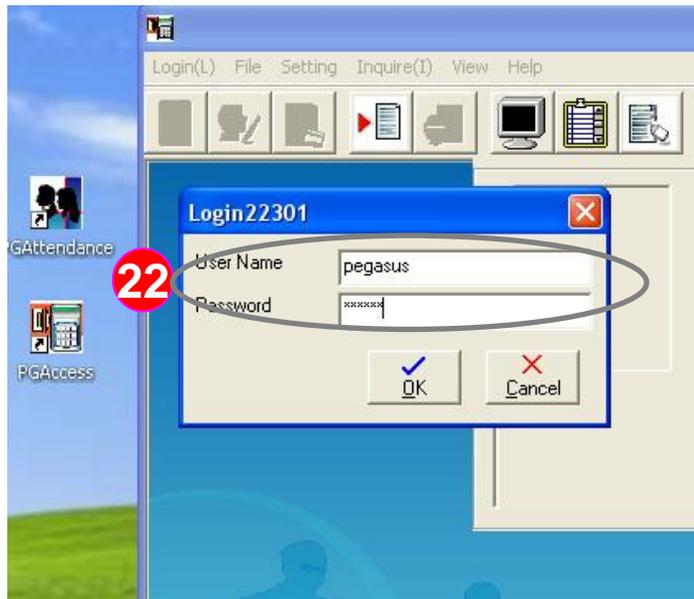

Instruction: Login to parent company access control software and do the subsidiary of the PC-T100 + PP-6750V card reader connection settings


22 :Please login to the administrator account system

Account name: pegasus
Password: pongee

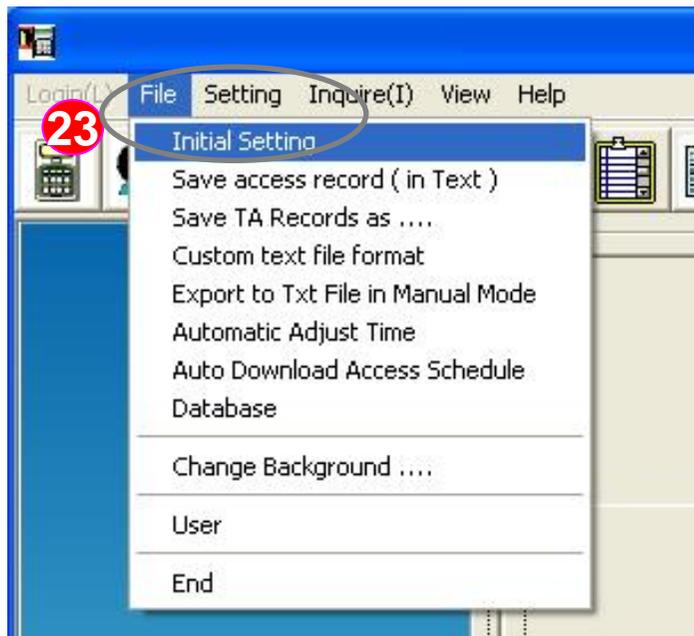

23 : Click the menu "File" and drop-down manu display window than click "Initial Setting"(shown at left)

How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

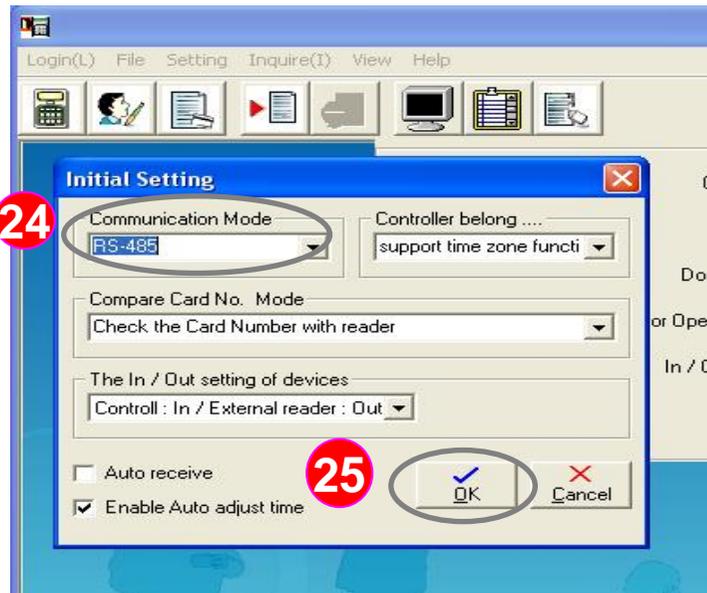


Instruction: Login to parent company access control software and do the subsidiary of the PC-T100 + PP-6750V card reader connection settings

24 : "Communication Mode ",please select " RS-485 "

* Note: according to the steps **18** - **20** , the PC-T100 use RS-485 interface communication to card reader.

25 : Press " OK " to save the setting

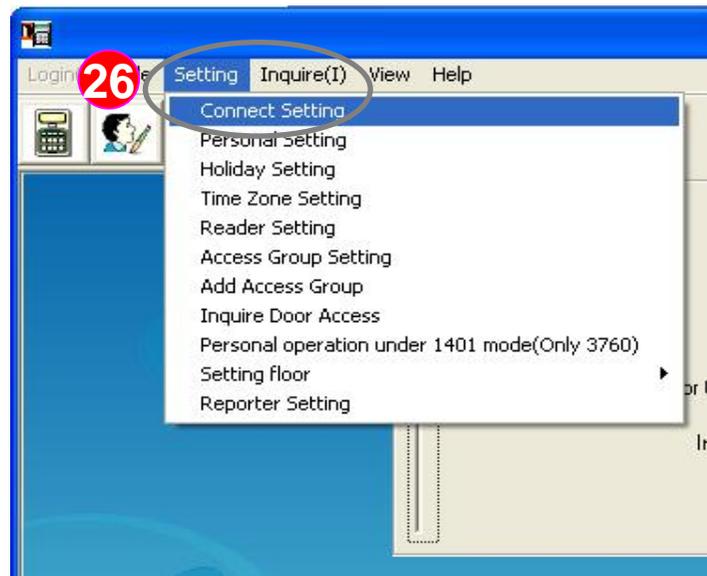

26 : Click the menu "Setting (S)" and drop-down manu display window then click " Connect Setting"(shown at left)



How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "



Instruction: Login to parent company access control software and do the subsidiary of the PC-T100 + PP-6750V card reader connection settings

- 27 : "Select Connect Mode", please select "TCP/IP "
- 28 :Please press " Edit IP Address "to add the subsidiary of the PC-T100 IP address
- 29 : "Edit IP Address" window appears, please click "Add"
- 30 :Please enter the subsidiary of PC-T100 IP address, " Area" input "Subsidiary" to facilitate the identification
- 31 : Press " OK " to save the setting
- 32 :The software will be included in the list of IP address
- 33 : Press " X " to complete the setting

How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

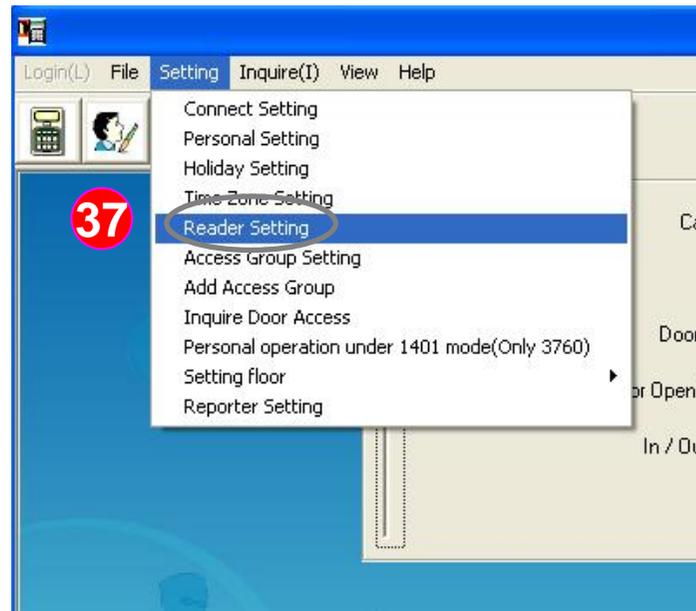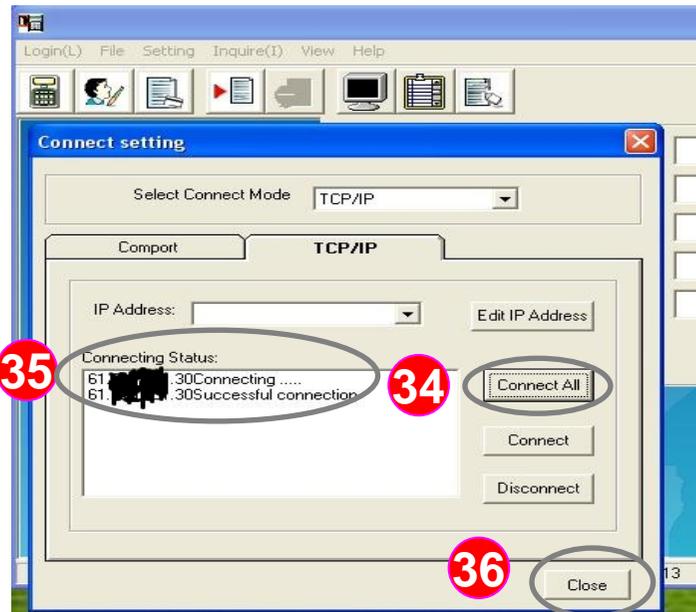

Instruction: Login to parent company access control software and do the subsidiary of the PC-T100 + PP-6750V card reader connection settings


34 :Click " Connect All " button, the software begin to detect all TCP / IP device

35 : You can find the subsidiary PC-T100 IP in the final state - " Successful connection", it means the TCP / IP connection is succeed

36 : Press " Close " to complete the setting

37 : Click the menu "Setting (S)" and drop-down manu display window then click "Reader Setting"(shown at left)

How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

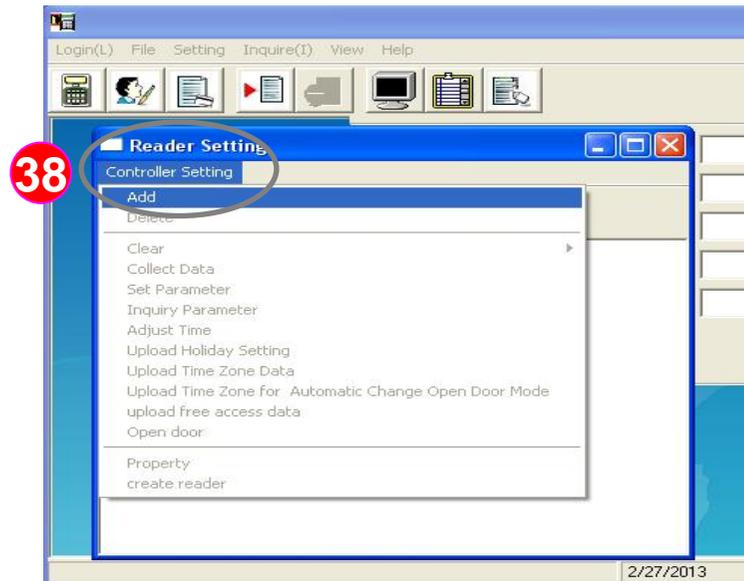


Instruction: Login to parent company access control software and do the subsidiary of the PC-T100 + PP-6750V card reader connection settings

38 : In the " Reader setting " menus, please click the "controller settings" , it will drop-down manu display window, please select "Add"



How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

Instruction: Login to parent company access control software and do the subsidiary of the PC-T100 + PP-6750V card reader connection settings

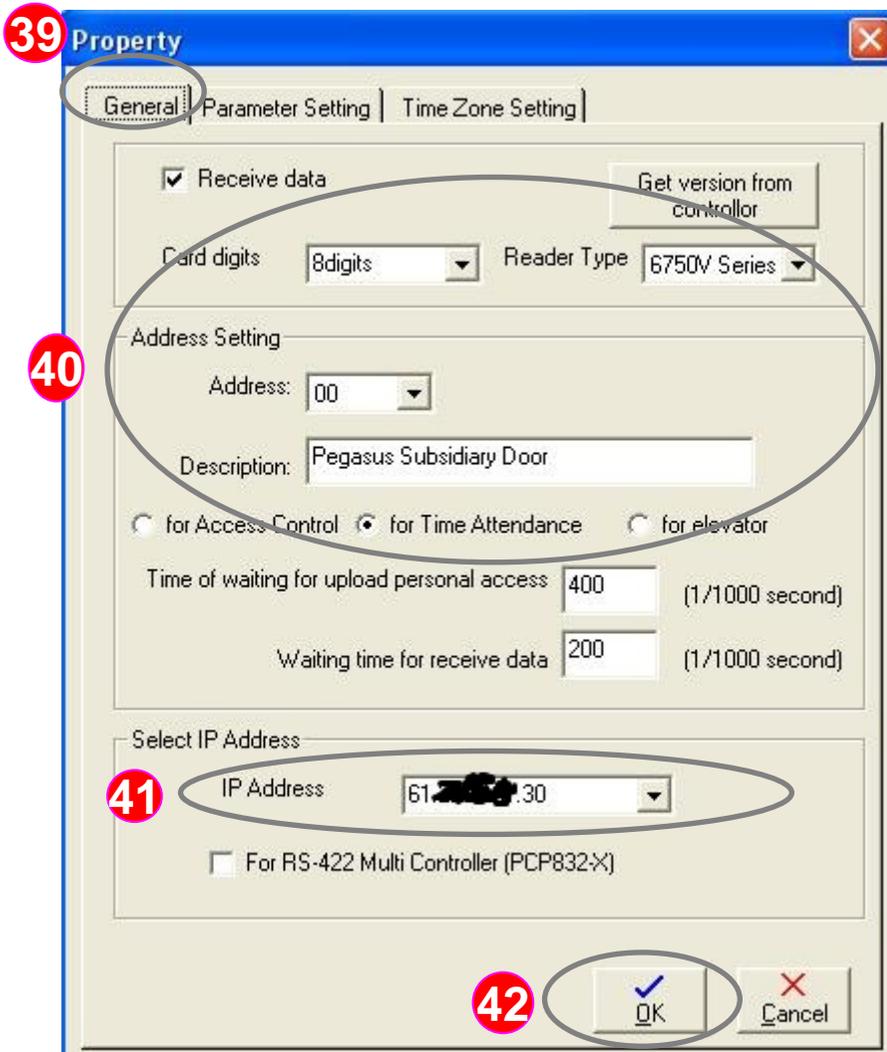

39 :Click "General" sheet, the system corresponding setting will switch to the window automatically

40 :PP-6750V installed in accordance with the subsidiary configuration, <Example> PP-6750V reference follows

1." Card digits " normal is " 8 digits "

2. " Reader Type " be sure to click on the " 6750 V Series "

3. " Address " with subsidiary card reader configuration


4. " Description " define the actual subsidiary card reader position (as shown on the left: "Pegasus Subsidiary Door ", meet the on-site situation

5."Purpose" in accordance with the requirements set

41 :In the " Select IP Address " item,please check drop-down menu to select subsidiary IP

42 : Press " OK " to save the setting


How to connect controller from internet by ELE software setting - Case study " PC-T100+6750V "

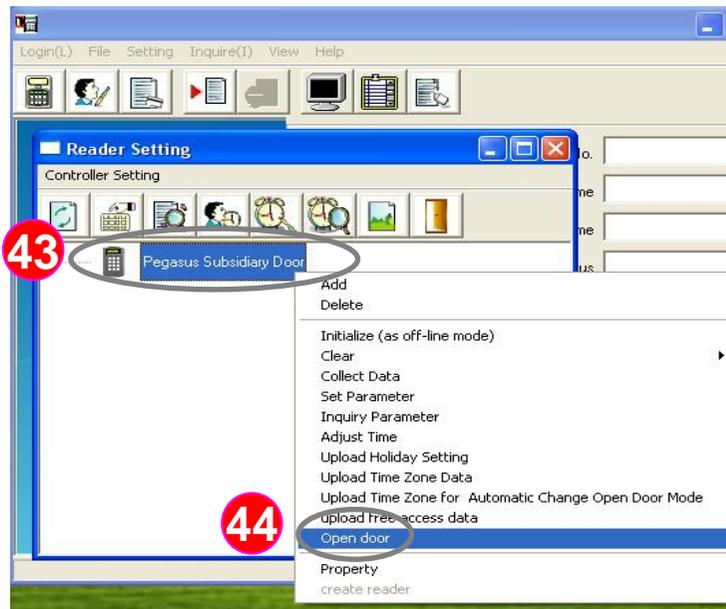

Instruction: Login to parent company access control software and do the subsidiary of the PC-T100 + PP-6750V card reader connection settings

43 :Left mouse button click the" Pegasus Subsidiary Door " reader (anti-blue card reader is selected)

44 :Then right-click the mouse button, the system will drop-down function menus, use left mouse button to select " Open door" .

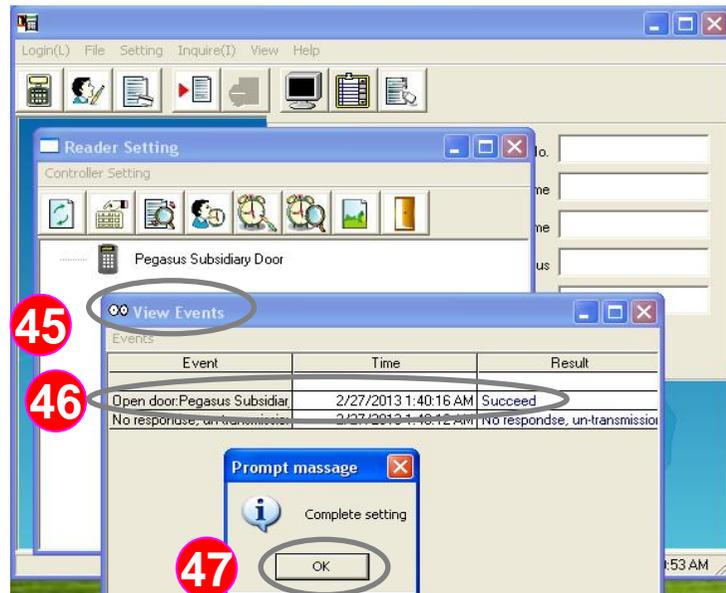

45 : At this time there are "view events" window.

46 :Please confirm " Pegasus Subsidiary Door " open door result is "Succeed" .

47 : Finally, click "OK" button to end